


Standard value: 0.15 mm (0.006 inch) or less  
Limit: 0.20 mm (0.008 inch)

## EXHAUST PIPE AND MAIN MUFFLER

### REMOVAL AND INSTALLATION

M1151008700152

Pre-removal and Post-installation Operation  
Front Under Cover Removal and Installation

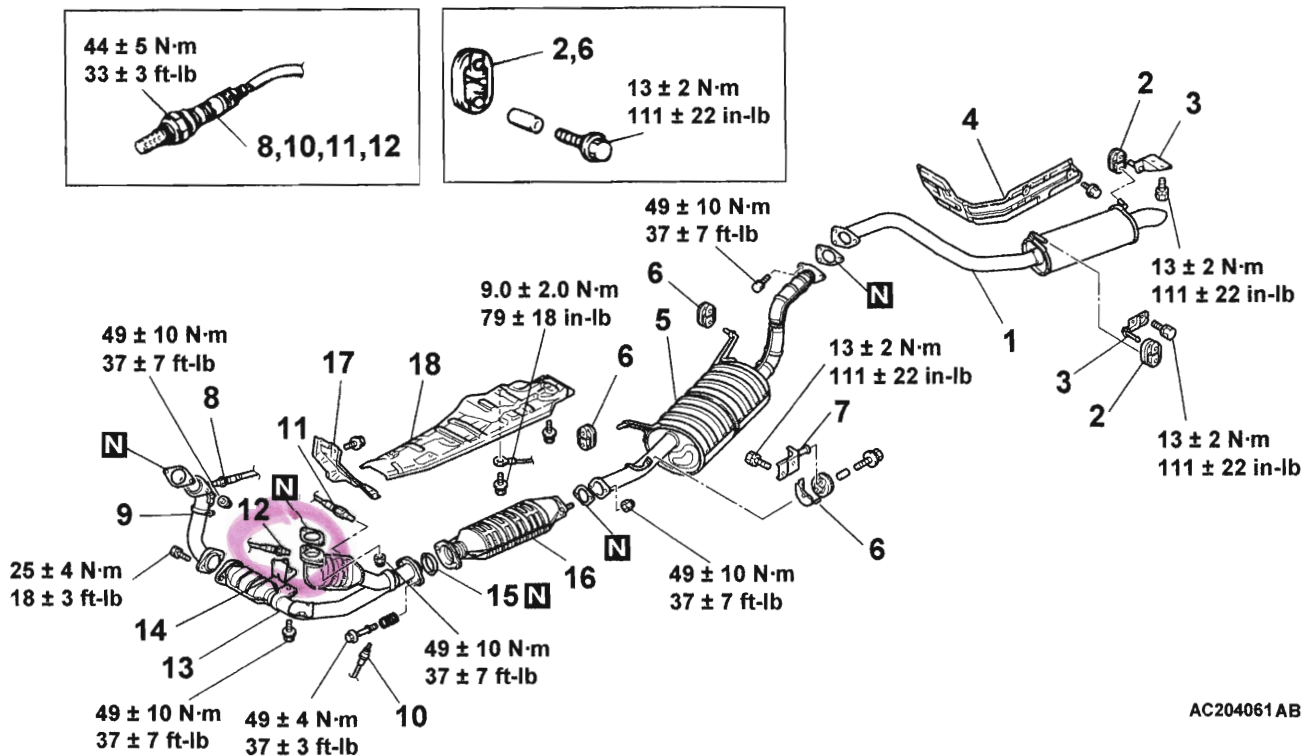

AC204061AB

#### TAIL PIPE REMOVAL STEPS

1. TAIL PIPE
2. HANGER
3. HANGER BRACKET
4. REAR FLOOR HEAT PROTECTOR

#### MAIN MUFFLER REMOVAL STEPS

5. MAIN MUFFLER
6. HANGER
7. HANGER BRACKET

#### FRONT EXHAUST PIPE REMOVAL STEPS

- <<A>> >>A<< 8. RIGHT BANK HEATED OXYGEN SENSOR (FRONT)
- <<A>> >>A<< 9. FRONT EXHAUST PIPE
- <<A>> >>A<< 10. RIGHT BANK HEATED OXYGEN SENSOR (REAR)

#### FRONT EXHAUST PIPE REMOVAL STEPS (Continued)

- <<A>> >>A<< 11. LEFT BANK HEATED OXYGEN SENSOR (REAR)
- <<A>> >>A<< 12. LEFT BANK HEATED OXYGEN SENSOR (FRONT)
13. WARM-UP THREE-WAY CATALYTIC CONVERTER
14. BRACKET
15. SEAL RING
16. CATALYTIC CONVERTER
17. DASH HEAT PROTECTOR
18. FRONT FLOOR HEAT PROTECTOR

#### Required Special Tool:

- MD998770: Oxygen sensor wrench