



ZC5018780000

Disassembly steps

<<A>>

1. Snap ring
2. Hub
3. Dust cover
4. Wheel bearing
5. Knuckle

<>

Assembly steps

5. Knuckle

Assembly steps

- | | |
|-------|--------------------------------|
| >>A<< | 4. Wheel bearing |
| | 1. Snap ring |
| >>B<< | 2. Dust cover |
| | 3. Hub |
| >>C<< | · Hub starting torque check |
| >>D<< | · Wheel bearing end play check |

Required Special Tools:

- MB990326: Preload Socket
- MB990810: Side Bearing Puller
- MB990883: Rear Suspension Bushing Arbor
- MB990890: Rear Suspension Bushing Base
- MB990935: Installer Adapter

- MB990938: Brass Bar
- MB991000: Spacer
- MB991017: Front Hub Remover and Installer
- MB991056 or MB991355: Knuckle Arm Bridge
- MB991388: Bush Remover Base
- MB991576: Base

DISASSEMBLY SERVICE POINT

<<A>> HUB REMOVAL

⚠ CAUTION

In the hub removal operation, make sure to replace the wheel bearing with new one.

Use special tools MB991017, MB991056 or MB991355, MB991000 to pull out the hub from the knuckle.

