

Front door trim removal steps

- <<A>> 2. Inside handle cover cap
3. Door trim cap
<> >>B<< 4. Front door trim <<A>>
5. Power window switch panel
· Power window switch connector <> >>B<<
6. Power window switch
· Remote-controlled mirror switch connector (RH)
7. Remote-controlled mirror switch (RH)

Front door trim removal steps


8. Front door pull handle bracket

Rear door trim removal steps


1. Inside handle cover cap
2. Door trim cap
3. Rear door trim
4. Power window switch panel
· Rear power window sub-switch connector
5. Power window switch
6. Rear door armrest bracket

REMOVAL SERVICE POINTS**<<A>> INSIDE HANDLE COVER CAP REMOVAL**

Insert a flat-tipped (-) screwdriver as shown in the figure to remove the inside handle cover cap.

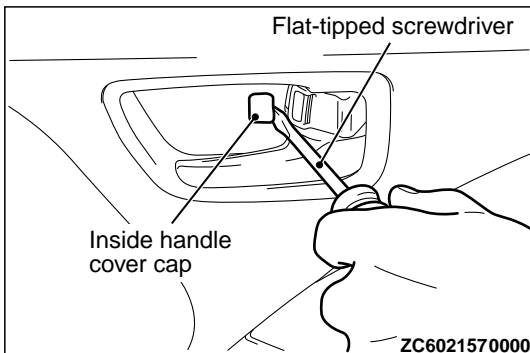**<> FRONT/REAR DOOR TRIM REMOVAL**

1. Insert a flat-tipped (-) screwdriver as shown in the figure to remove the door trim cap.

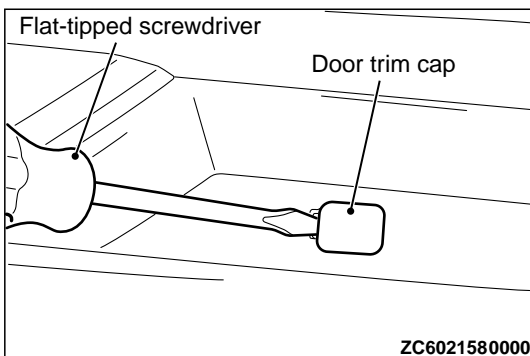

2. Using a flat-tipped (-) screwdriver as shown in the figure, remove the inside lock cable and the inside handle cable, then remove the door trim.

