

# Schedule 1

## Schedule 1

MAINTENANCE ITEM	MAINTENANCE INTERVAL (Mileage or Time- whichever occurs first)																				
	miles x 1,000	7.5	15	22.5	30	37.5	45	52.5	60	67.5	75	82.5	90	97.5	105	112.5	120	127.5	135	142.5	150
	km x 1,000	12	24	36	48	60	72	84	96	108	120	132	144	156	168	180	192	204	216	228	240
	months	6	12	18	24	30	36	42	48	54	60	66	72	78	84	90	96	102	108	114	120
<b>EMISSION CONTROL SYSTEM MAINTENANCE</b>																					
Check fuel system for leaks (tank, pipe line and connection, and fuel tank filler tube cap)									X								X				
Check fuel hoses condition					X <sup>1</sup>				X				X				X				X
Replace air cleaner filter		X <sup>1</sup>			X		X		X		X		X		X		X		X		X
Check evaporative emission control system for leaks and clogging (except evaporative emission canister)									X								X				
Replace spark plugs, iridium-tipped type															X						
Inspect and adjust valve clearance <sup>*2</sup>	3A9 engine, 4B1 engine and 4B4 engine <sup>*3</sup>								X								X				
	4J1 engine and 6B3 engine <sup>*3</sup>					X			X				X				X				
Replace timing belt (except vehicles with timing chain)	Every 105,000 miles (168,000 km)																				
Check drive belts condition (for the generator, water pump, power steering pump)					X				X				X				X				X
Check and service exhaust system (connection portion of muffler, muffler pipes and converter heat shields)					X <sup>1</sup>				X				X				X				X
<b>GENERAL MAINTENANCE</b>																					
Change engine oil	Every 3,750 miles (6,000 km) or every 3 months																				
Replace engine oil filter	Every 3,750 miles (6,000 km) or every 3 months																				
Change manual transaxle/transmission oil					X				X				X				X				X
Check automatic transaxle/transmission fluid level and condition		X					X				X				X				X		
Change automatic transaxle/transmission fluid					X				X				X				X				X
Change transfer oil					X				X				X				X				X
Inspect coolant hoses condition (radiator hose, heater hose)					X				X				X				X				X

\*Continued on next page

MAINTENANCE ITEM	MAINTENANCE INTERVAL (Mileage or Time- whichever occurs first)																					
	miles x 1,000	7.5	15	22.5	30	37.5	45	52.5	60	67.5	75	82.5	90	97.5	105	112.5	120	127.5	135	142.5	150	
	km x 1,000	12	24	36	48	60	72	84	96	108	120	132	144	156	168	180	192	204	216	228	240	
	months	6	12	18	24	30	36	42	48	54	60	66	72	78	84	90	96	102	108	114	120	
Change engine coolant	First change at 120,000 miles (192,000 km) or at 96 months, thereafter every 90,000 miles (144,000 km) or 72 months																					
Inspect disc brake pads and rotors for wear	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
Inspect rear drum brake linings and rear wheel cylinders for wear and leaks of all wheels		X		X		X		X		X		X		X		X		X		X		X
Check brake hoses for deterioration or leaks		X		X		X		X		X		X		X		X		X		X		X
Change brake fluid (except Outlander Sport)						X						X								X		
Inspect ball joint and steering linkage seals for grease leaks and damage				X					X				X				X					X
Inspect driveshaft boots for grease leaks and damage		X		X		X		X		X		X		X		X		X		X		X
Inspect suspension system for looseness and damage	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
Check rear axle oil level				X					X					X					X			X
Inspect air purifier filter for clogging	Every 3,750 miles (6,000 km) or every 3 month																					
Replace air purifier filter	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X	X
Check tire repair sealant expiration date (vehicles with tire repair kit)	Every 12 months																					
Rotate tires	Every 7,500 miles (12,000 km)																					

\*1: This maintenance is recommended but is not required to maintain the emissions warranty.

\*2: Check the valve clearance in case abnormal noise from valves is heard.

\*3: Refer to "Specifications" section of your owner's manual for your applicable engine model.

## Schedule 2

# Schedule 2

MAINTENANCE ITEM	MAINTENANCE INTERVAL (Mileage or Time- whichever occurs first)																				
	miles x 1,000	7.5	15	22.5	30	37.5	45	52.5	60	67.5	75	82.5	90	97.5	105	112.5	120	127.5	135	142.5	150
	km x 1,000	12	24	36	48	60	72	84	96	108	120	132	144	156	168	180	192	204	216	228	240
	months	6	12	18	24	30	36	42	48	54	60	66	72	78	84	90	96	102	108	114	120
<b>EMISSION CONTROL SYSTEM MAINTENANCE</b>																					
Check fuel system for leaks (tank, pipe line and connection, and fuel tank filler tube cap)									X								X				
Check fuel hoses condition					X <sup>1</sup>				X				X				X				X
Replace air cleaner filter					X				X				X				X				X
Check evaporative emission control system for leaks and clogging (except evaporative emission canister)									X								X				
Replace spark plugs, iridium-tipped type															X						
Inspect and adjust valve clearance <sup>*2</sup>	3A9 engine, 4B1 engine and 4B4 engine <sup>*3</sup>								X								X				
	4J1 engine and 6B3 engine <sup>*3</sup>					X			X				X				X				
Replace timing belt (except vehicles with timing chain)	Every 105,000 miles (168,000 km)																				
Check drive belts condition (for the generator, water pump, power steering pump)					X				X				X				X				X
Check and service exhaust system (connection portion of muffler, muffler pipes and converter heat shields)					X <sup>1</sup>				X				X				X				X
<b>GENERAL MAINTENANCE</b>																					
Change engine oil	Every 7,500 miles (12,000 km) or every 6 months																				
Replace engine oil filter	Every 7,500 miles (12,000 km) or every 6 months																				
Check manual transaxle/transmission oil level and condition					X				X				X				X				X
Check transfer oil level and condition					X								X								X
Change transfer oil									X								X				
Inspect coolant hoses condition (radiator hose, heater hose)					X				X				X				X				X
Change engine coolant	First change at 120,000 miles (192,000 km) or at 96 months, thereafter every 90,000 miles (144,000 km) or 72 months																				

\*Continued on next page

MAINTENANCE ITEM	MAINTENANCE INTERVAL (Mileage or Time- whichever occurs first)																					
	miles x 1,000	7.5	15	22.5	30	37.5	45	52.5	60	67.5	75	82.5	90	97.5	105	112.5	120	127.5	135	142.5	150	
	km x 1,000	12	24	36	48	60	72	84	96	108	120	132	144	156	168	180	192	204	216	228	240	
months	6	12	18	24	30	36	42	48	54	60	66	72	78	84	90	96	102	108	114	120		
Inspect disc brake pads and rotors for wear		X		X		X		X		X		X		X		X		X		X		X
Inspect rear drum brake linings and rear wheel cylinders for wear and leaks of all wheels				X				X				X				X						X
Check brake hoses for deterioration or leaks		X		X		X		X		X		X		X		X		X		X		X
Change brake fluid (except Outlander Sport)						X						X							X			
Inspect ball joint and steering linkage seals for grease leaks and damage				X				X				X				X						X
Inspect driveshaft boots for grease leaks and damage		X		X		X		X		X		X		X		X		X		X		X
Inspect suspension system for looseness and damage				X				X				X				X						X
Check rear axle oil level				X				X				X				X						X
Replace air purifier filter		X		X		X		X		X		X		X		X		X		X		X
Check tire repair sealant expiration date (vehicles with tire repair kit)	Every 12 months																					
Rotate tires	Every 7,500 miles (12,000 km)																					

\*1: This maintenance is recommended but is not required to maintain the emissions warranty.

\*2: Check the valve clearance in case abnormal noise from valves is heard.

\*3: Refer to "Specifications" section of your owner's manual for your applicable engine model.