


BLEEDING OF MASTER CYLINDER


When removed the master cylinder assembly, bleed the master cylinder in the following procedure to make bleeding of the brake pipeline easier. (When no brake fluid is in the master cylinder)

1. Fill the brake fluid reservoir with the brake fluid.
2. Depress and hold the brake pedal.
3. Another operator closes the master cylinder outlets with his fingers.
4. In this condition, release the brake pedal.
5. Repeat Steps 2 to 4 for 3 or 4 times to fill the master cylinder with the brake fluid.

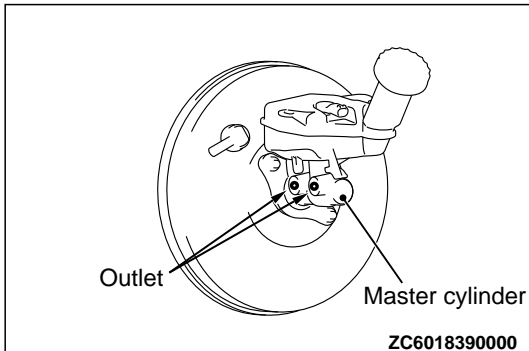

BLEEDING OF BRAKE PIPELINE

1. Perform the bleeding in the order shown in the figure.

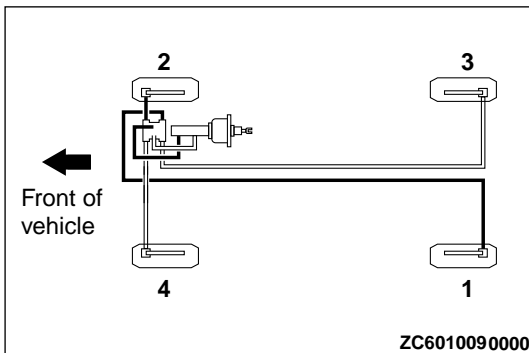

BRAKE FLUID LEVEL SWITCH CHECK

M13501000091USA0000010000

The brake fluid level switch is normal when the following conditions are met: When the brake fluid level is above "MIN," continuity is detected; and when the level is below "MIN," no continuity is detected.

