


INSPECTION

M1511019103447


DOOR MIRROR ASSEMBLY OPERATION CHECK

Remove the door trim, and then connect the battery to the door mirror assembly connector to check that the door mirror operates.

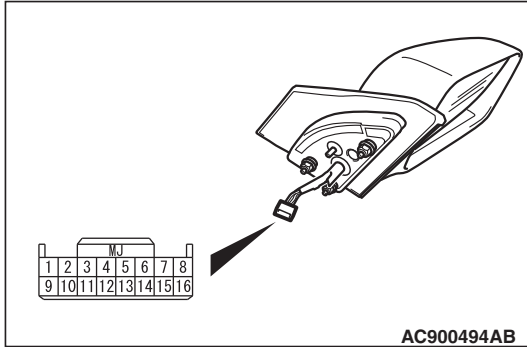

Battery connection	Operation direction
<ul style="list-style-type: none"> Connect terminal 13 to the negative battery terminal. Connect terminal 4 to the positive battery terminal. 	Up
<ul style="list-style-type: none"> Connect terminal 13 to the positive battery terminal. Connect terminal 4 to the negative battery terminal. 	Down
<ul style="list-style-type: none"> Connect terminal 13 to the negative battery terminal. Connect terminal 12 to the positive battery terminal. 	Right
<ul style="list-style-type: none"> Connect terminal 13 to the positive battery terminal. Connect terminal 12 to the negative battery terminal. 	Left

REMOTE CONTROLLED MIRROR SWITCH CONTINUITY CHECK

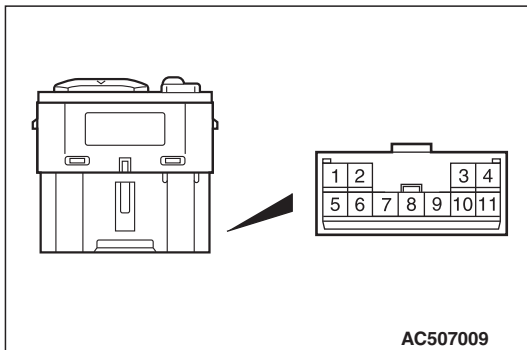

Switch position	Tester connection	Specified condition
Left side	Up	1 – 6, 9 – 11
	Down	1 – 11, 6 – 9
	Right	1 – 6, 9 – 10
	Left	1 – 10, 6 – 9
Right side	Up	1 – 6, 3 – 9
	Down	1 – 3, 6 – 9
	Right	1 – 6, 2 – 9
	Left	1 – 2, 6 – 9